

CONFIGURAZIONE LETTORE EYOYO EY-017 2D

1



Reset

2



Manual Trigger mode

3



4



5



6A



Enable reading all the
2D barcodes

6B



Disable reading all the
2D barcodes

7



Disable Interleaved 2 of 5